 


ROBERTS

Sound for Generations

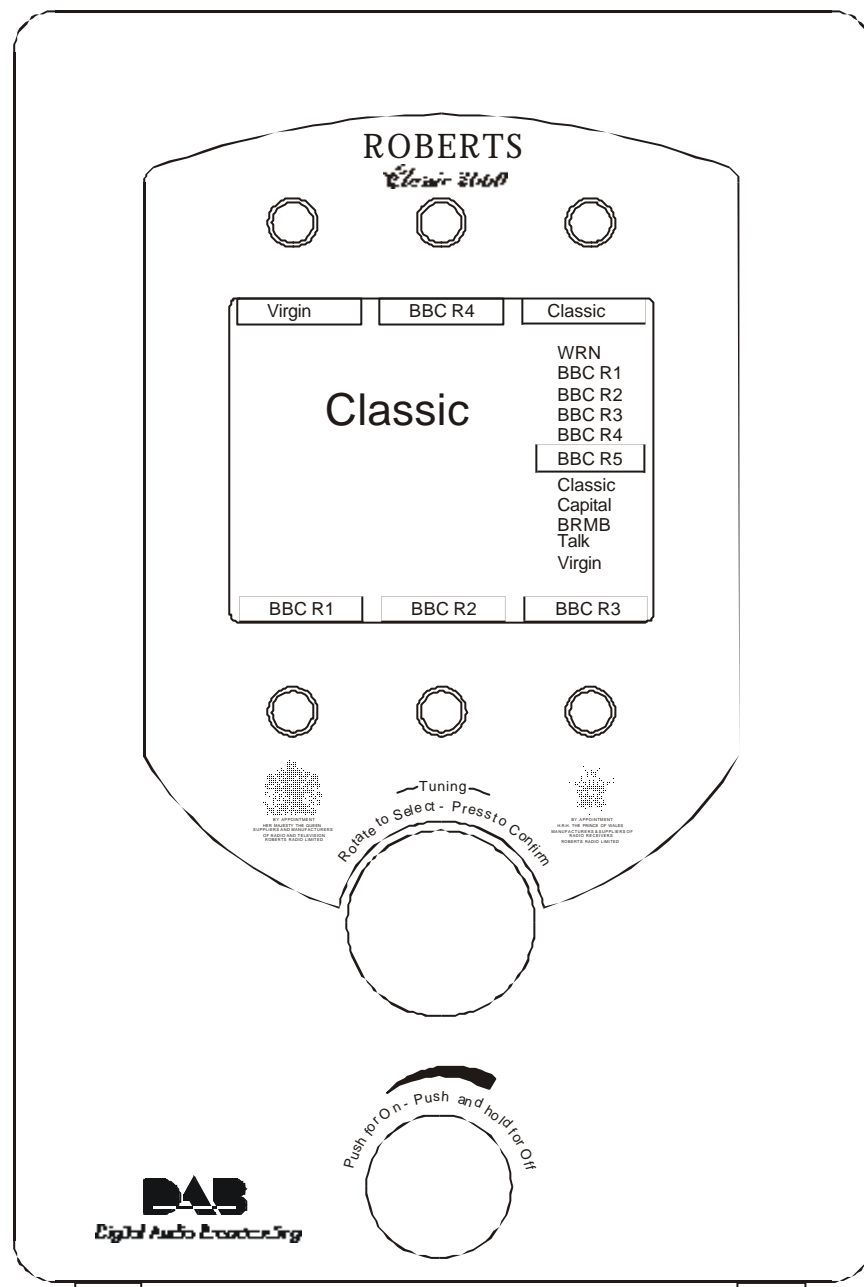

Classic 2000

Digital Audio Broadcasting Receiver




Please read this manual before use

Contents

Controls	1
AC adaptor/charger	2
Switching on your radio	3
Switching off your radio	3
Scanning for radio stations	3
Tuning to radio stations	4
Preset memories	5
Recalling stations from preset memories	6
Replacing stations in preset memories	7
Secondary services	8

Controls

 
1. Preset buttons
2. Preset station display
3. Alphabetical station list
4. Station window
5. Station name and text display
6. Tuning control
7. Volume and On/Off control

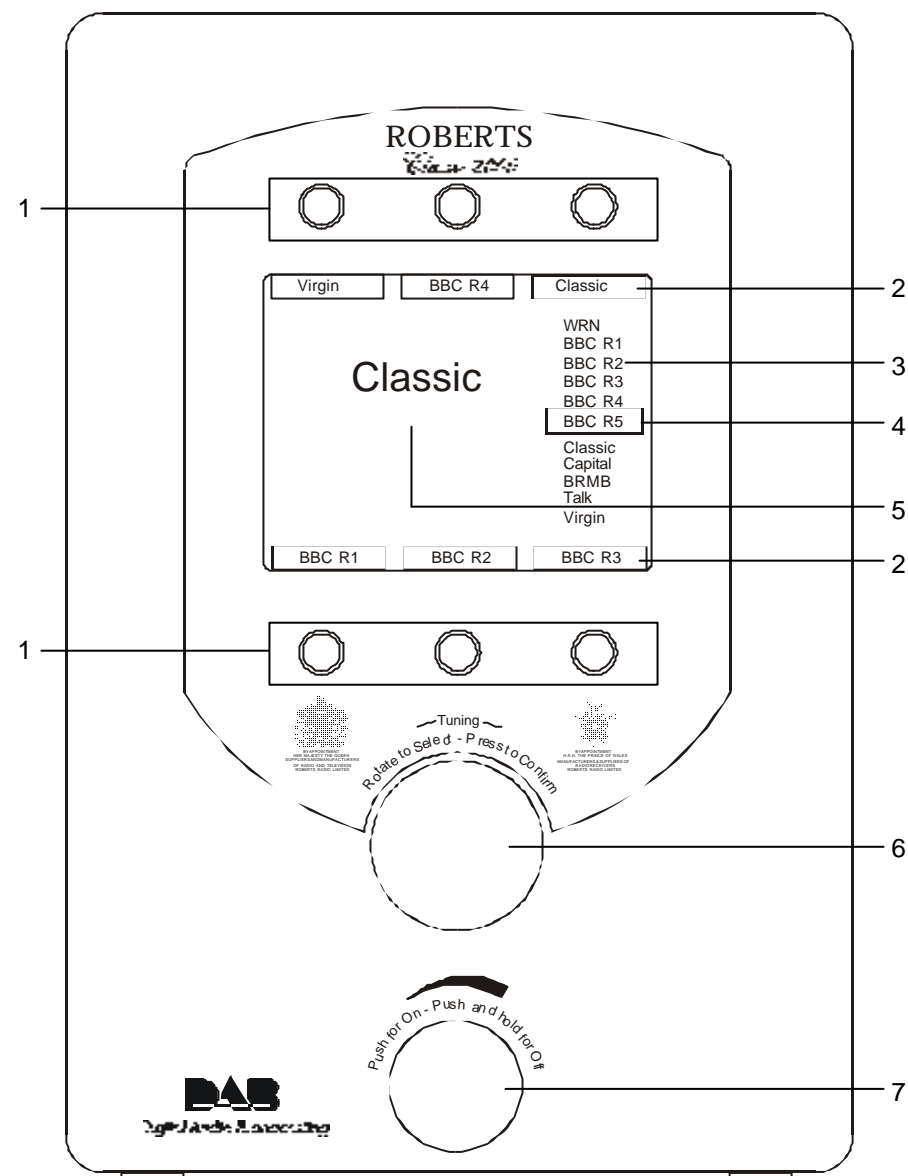

AC adaptor/charger


Your radio is fitted with an internal rechargeable battery giving approximately 8 hours playing time when fully charged.

1. Insert the adaptor plug into the DC socket on your rear radio (left most socket when viewed from rear)
2. Plug the flat 2 pin plug into the AC adaptor.
3. Plug the adaptor lead into a standard 13A mains socket outlet.
4. The AC adaptor will power the radio and charge the internal battery at the same time.
5. When first installed the battery should be charged overnight.
6. The radio will play for approximately 8 hours when used on battery with the AC adaptor disconnected.

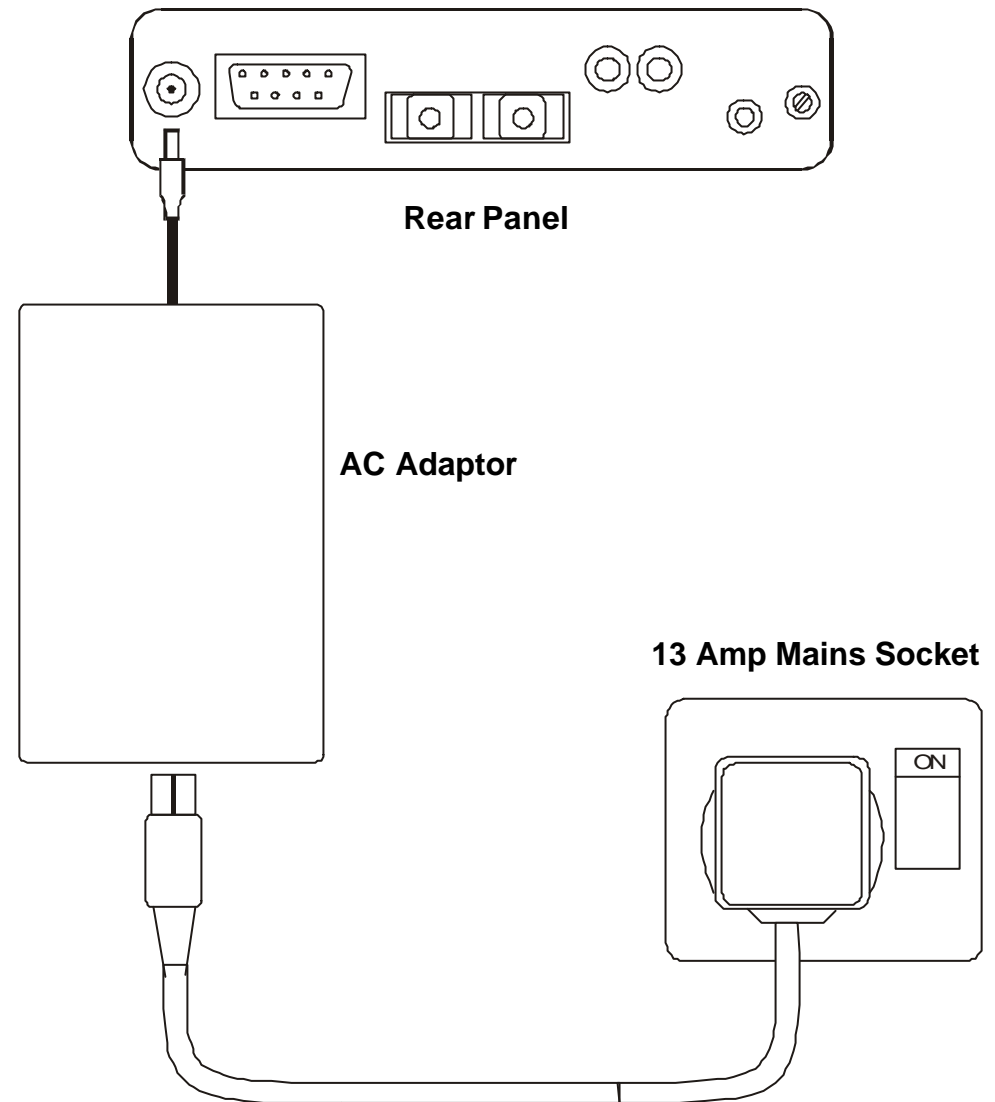


Switching on your radio

1. Press in and release the volume control to switch on your radio. A copyright message will appear in the display for a few seconds, after which your radio will be ready to use.

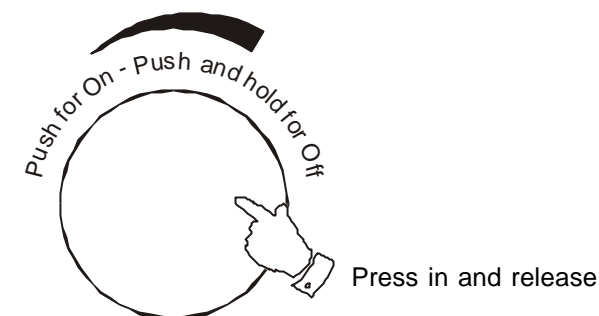

Switching off your radio


1. Press and hold in the volume control until the radio switches off.

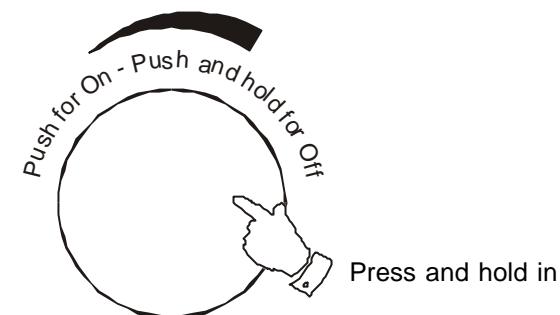

Scanning for radio stations


(only necessary when first installed or when searching for new stations)

1. Switch on the radio as previously described.
2. Press and hold in the Tuning control until the word "SCANNING FOR SERVICES" appears on the display.
3. Your radio will search for available stations and arrange in an alphabetical list on the right side of the display.

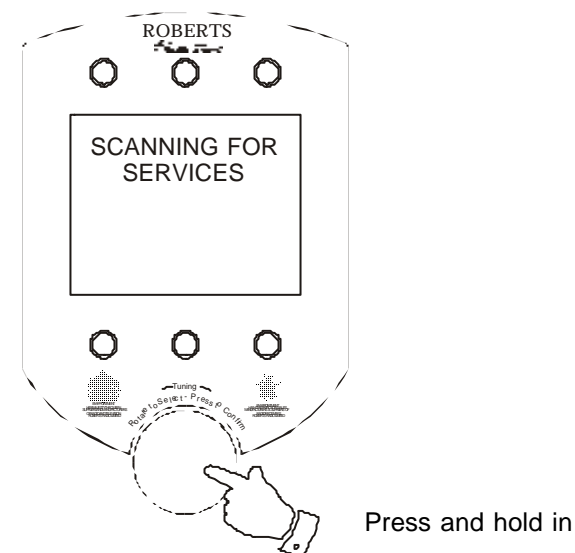

Tuning to radio stations.

1. Switch on the radio as previously described.
2. Rotate the tuning control until the desired station name appears in the small rectangular station window in centre of alphabetical station list.
3. Press in and release the tuning knob to confirm the selection.
4. The station name and text information will appear in the display.
5. To tune to another station rotate the tuning knob until the desired station appears in the small rectangular station window in centre of alphabetical station list.
6. Press in and release the tuning knob to confirm the selection.

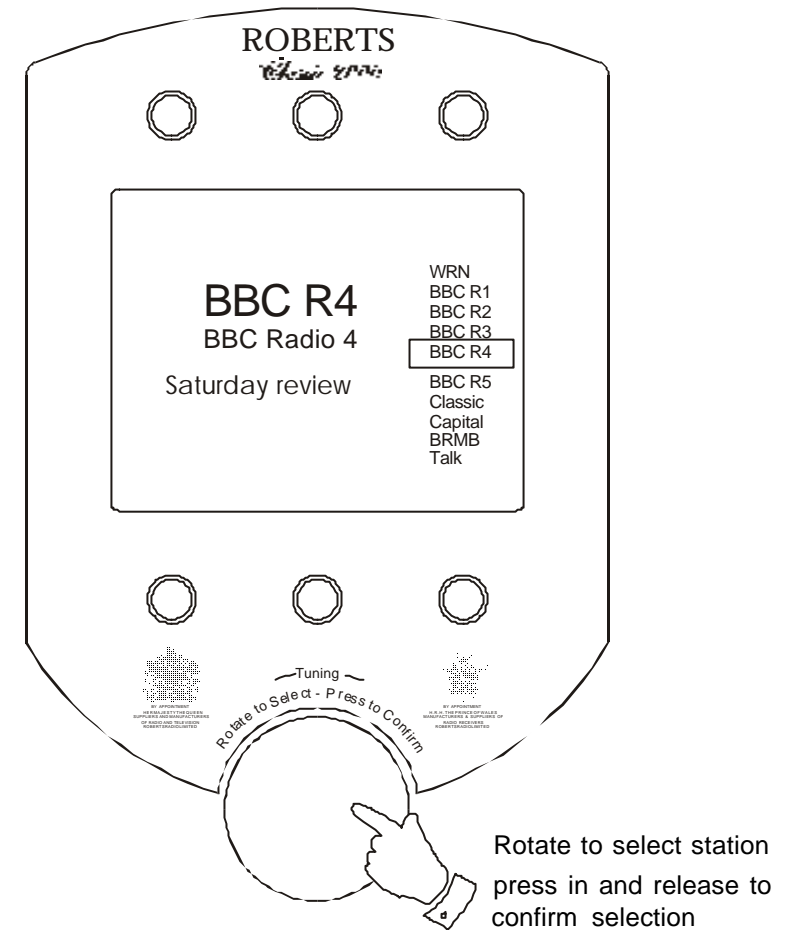


Preset memories

Your radio can store up to six favourite stations in preset memories.


1. Tune in to the required station as described above.
2. Press and hold in one of the preset buttons until the station name appears in the display window under preset (approx. 2 seconds).
3. Repeat this process for the remaining five presets.

Press and hold in until
station appears in display window under
preset

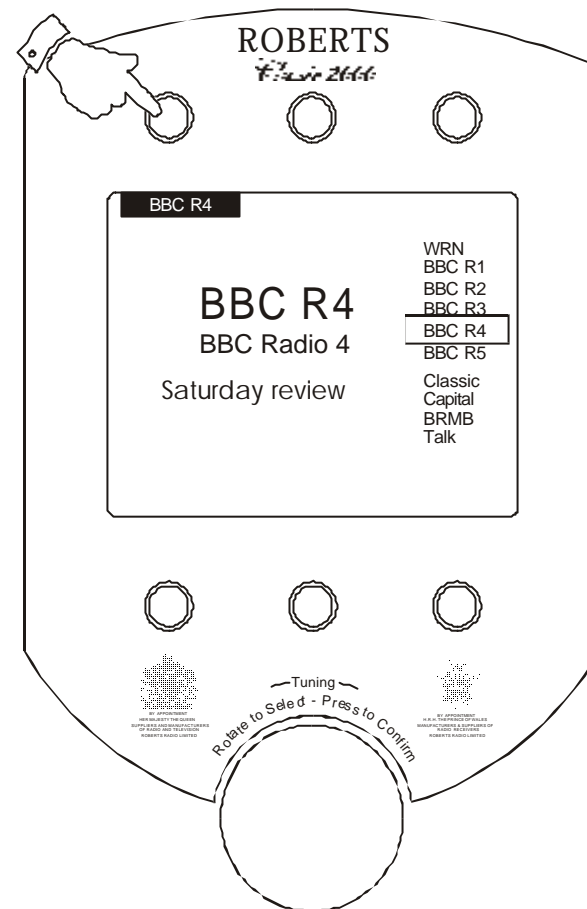

Recalling stations from preset memories


1. Press the **Power button** to turn on the radio.
2. Momentarily press and release the required **Preset button**, your radio will tune to the station and its name will appear in the display.

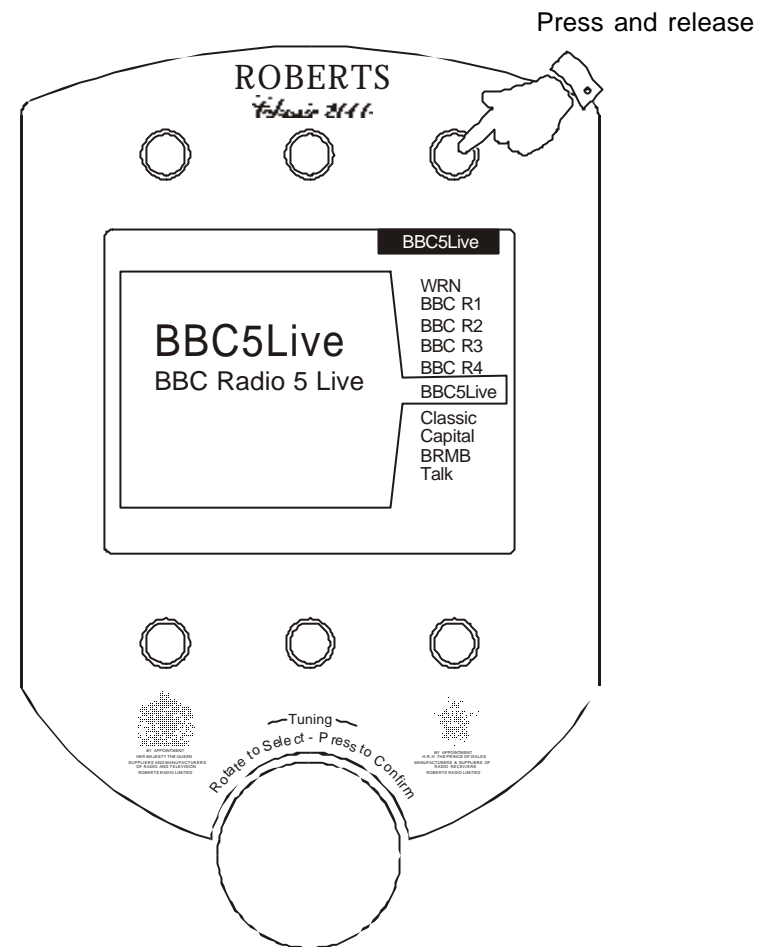

Replacing stations in preset memories

Stations previously stored in preset memories can be overwritten with new stations as follows:-

1. Tune in to the required new station.
2. Press and hold in one of the preset buttons until the new station name appears in the box alongside preset (approx. 2 seconds)

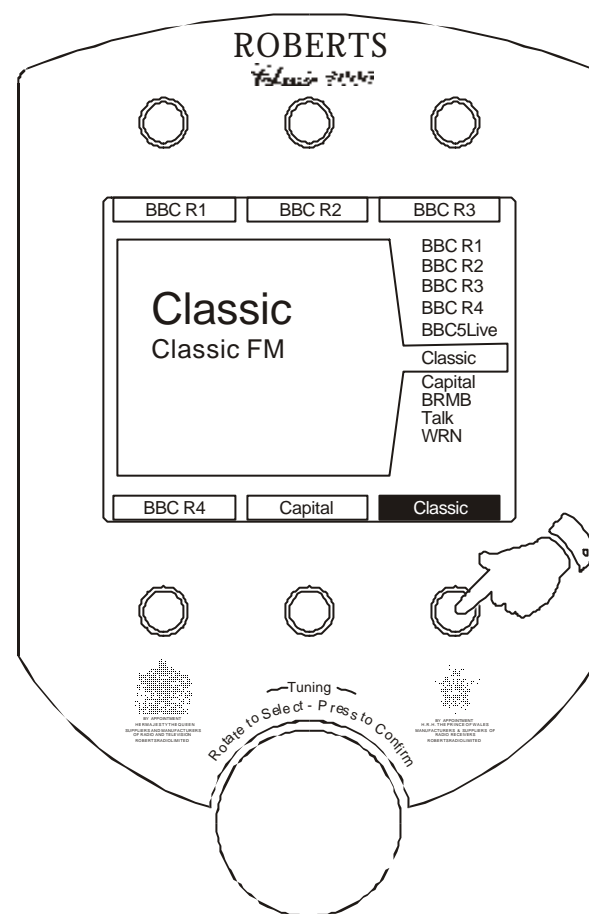

Press and hold in until station appears in display window under preset

Secondary services

Certain radio stations carry additional services, known as secondary services. This facility enables broadcasters to provide up to date coverage of major events in addition to coverage provided by the main station.

These services are dynamic and can be turned on and off to suit coverage of major sporting or, for example parliamentary events.

At the time this booklet was produced secondary services were only available on BBC 5 Live.

To tune into a secondary service proceed as follows:-

1. Tune into BBC 5 Live.
2. The secondary service will appear below the main station indented to the right.
3. Rotate the tuning control until the secondary service (e.g. Sports+) appears in the tuning window.
4. Press in and release the tuning control to confirm the selection.
5. Secondary services can be preset as previously described. The only limitation being when recalling a preset secondary service that is no longer available; in this case the radio will tune to the parent station that was originally carrying the secondary service.

